



WARNING:

IN ORDER TO PROPERLY MAINTAIN YOUR HESTAN CUE SYSTEM, DO NOT PUT THE HESTAN CUE COOKWARE IN THE DISHWASHER OR THE OVEN.

hestancue.com/support/guides

hestancue.com

For Household Use Only.

Copyright © 2016 Hestan Smart Cooking Inc. All Rights Reserved.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hestan Smart Cooking Inc is under license.

HESTAN CUE™



Quick Start Guide



The Hestan Cue™ Cooking System

SMART INDUCTION BURNER

SMART COOKWARE

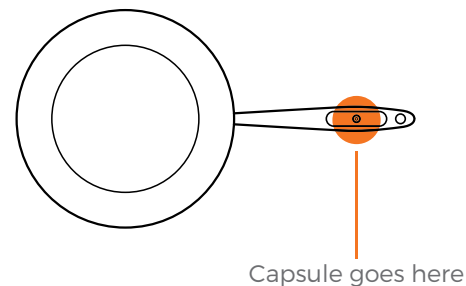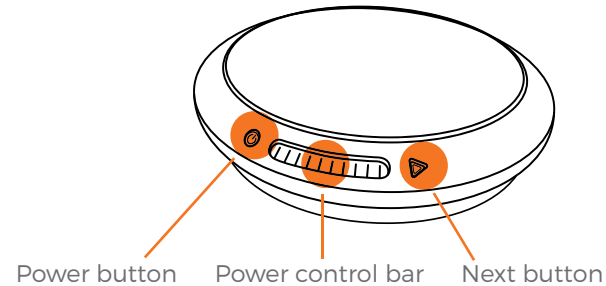


SMART CAPSULE



Capsule, (1) AAA battery, battery cap, screw, ruler

Get the App


STEP 1 - Download the Hestan Cue app to your smart device and follow the in-app prompts to set up your system.

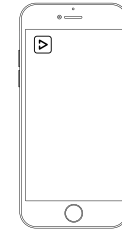

Ready the Hestan Cue Smart Cookware


STEP 2 - Remove battery cap and bottom screw and insert battery.

Reinsert battery cap and rotate 90 degrees to "lock."

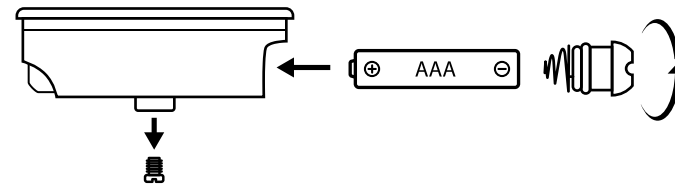


STEP 3 - Install capsule in cookware handle and secure with bottom screw.

Contact points **MUST** be oriented towards the pan body.

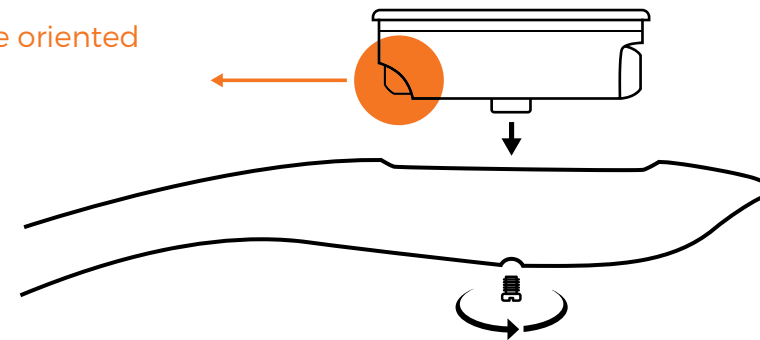


Ready the Hestan Cue Smart Induction Burner

STEP 4 - Plug the burner into a dedicated power outlet.

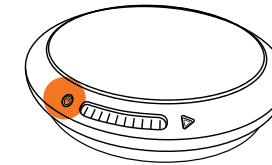


Press the **power button** to turn on/off. Blue light indicates connected mode.

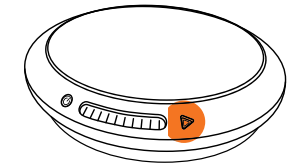


Press the **next button** when prompted by the app.

Manual Mode – Control Without the Hestan Cue App

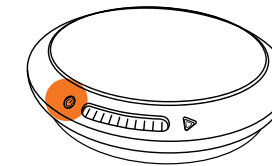

Press the **power button** to turn on/off. White light indicates manual mode (not connected to app).

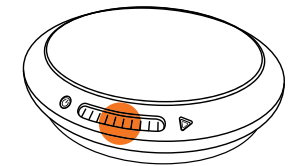

Swipe the power control bar from left to right to increase the power level from 1-10. Swipe left to decrease power to lowest setting of level 1.